

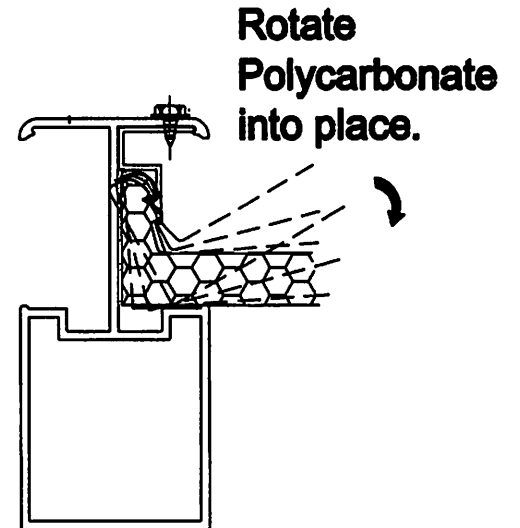


POLYCARBONATE INSTALLATION

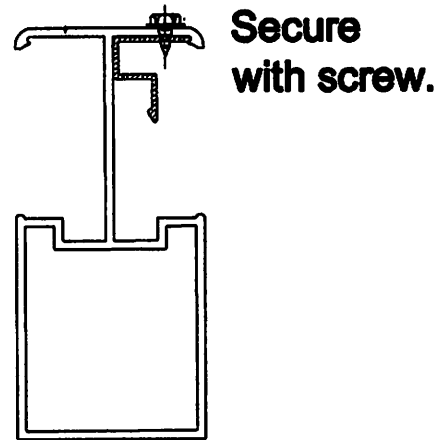

To install last panel,

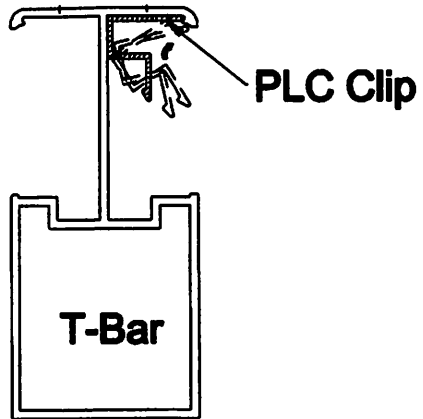